

Commercial Quality Ice Crusher

deni[®]

Model #6200

IMPORTANT
Please keep these instructions
and your original box
packaging.



INSTRUCTIONS
FOR PROPER USE AND CARE

IMPORTANT SAFEGUARDS

When using this electrical appliance, safety precautions should always be observed, including the following:

- Read all of the instructions.
- Make sure that the supply voltage is the same as the voltage marked on the ice crusher (see rating label).
- Do not leave appliance when plugged in.
- Do not use outdoors or on a wet surface.
- Do not allow to be used as a toy. Close adult supervision must be provided when this appliance is used by or near children.
- Use only as described in this manual.
- Unplug from outlet when not in use, before cleaning and before attaching or taking off parts.
- Do not use with damaged cord or plug. If the appliance is not working properly, has been dropped, damaged, left outdoors, or dropped into water, return it to Keystone Manufacturing Company, Inc. for proper service, replacement, or repair immediately.
- Do not do the following: pull or carry by the cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. Do not operate appliance over cord. Keep cord away from heated surfaces. Do not let cord hang over the edge of the table or counter.
- Do not place the ice crusher on or near hot gas or electric burner or in a heated oven.
- Never place fingers or other utensils into feed or discharge areas. And never place your finger or other utensils into the ice crushing chamber.

- Prior to use, wash all parts that will be in contact with food.
- The ice crusher should be placed on a level and non-slippery surface, as the appliance vibrates during operation.
- Make sure the ice container is in place before operating the ice crusher.
- To protect against electrical shock, do not immerse plug, cord or motor top in water or any other liquid.
- Using attachments not recommended or sold by Deni/Keystone Manufacturing Co., Inc. may cause hazards. We do not accept any liability for damage caused by using improper accessories.
- Do not use an extension cord with this ice cream maker. However, if one is used, it must have a rating equal to or exceeding the rating of this appliance.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord. Do not handle plug or appliance with wet hands.
- Check the ice crushing chamber for the presence of foreign objects, make sure there is nothing inside the ice crushing chamber before using.
- The ice crusher has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way, as a safety feature. Reverse the plug if the plug does not fit fully in the outlet. Contact a qualified electrician if it still does not fit. Do not attempt to defeat this safety feature.
- This unit is recommended for household, indoor use only.

SAVE THESE INSTRUCTIONS

Commercial Quality Ice Crusher

FEATURES



Before First Use

1. Remove all packing materials and literature from inside the ice crusher.
2. Wash the ice chute and ice container in warm soapy water. Rinse and dry all parts thoroughly. **NEVER** immerse unit in water or any other liquid. **NEVER** clean any parts in a dishwasher.

How To Operate

1. Place the unit on a dry, flat surface. Plug the unit in.
2. Check the ice crushing chamber for the presence of foreign objects, making sure there is nothing inside the chamber before using.
3. Put the ice container in place and turn the unit on.
Note: The ice crusher will not operate unless the ice container is in position.
4. To begin crushing, drop ice cubes into the ice chute. The blades in the ice crushing chamber are self feeding. **Do not** push the cubes into the blades with hands or utensils.
NOTE: If an ice cube gets lodged in the crushing chamber, turn the unit off and unplug. Pour warm water down through the ice chute until the lodged cube melts or falls free.

Cleaning and Maintenance

- Unplug the ice crusher before cleaning it. **Never immerse this appliance in water or any other liquid.**
- Wipe the exterior of the ice crusher with a damp cloth.
- Wash the ice chute and ice container in warm soapy water. Rinse and dry all parts thoroughly. Avoid the use of abrasives or steel wool.
- If crushing flavored ice cubes, the crushing chamber can be cleaned by crushing plain ice cubes, until clean. **Do not** attempt to clean the ice chamber with hands. The chamber houses the crushing blades. Use extreme caution.
- **Do not** disassemble the unit for cleaning purposes.
- All parts should be thoroughly dried before storing.

CUSTOMER SERVICE

If you have any questions or problems regarding the operation of your Deni Ice Crusher, call our customer service department toll free:

Monday through Friday
8:30 a.m. to 5:00 p.m.

(Eastern Standard Time)

1-800-DENI-822

Deni by Keystone Manufacturing Company, Inc.®

ONE-YEAR LIMITED WARRANTY

Your Deni Ice Crusher is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc. 33 Norris Street, Buffalo, NY 14207. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catharines, Ontario L2M 6T4. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province.